

# INTELPAGE IP

## Getting Critical Messages to the Right People – When Every Second Counts


- IP/Ethernet connectivity
- HTML browser or terminal configuration
- Fully synthesized paging transmitter
- Versatile enclosure options
- Available in VHF/UHF
- 5 Watt to 100 Watt power options



### Versatile Paging Transmitter

The Fusion™ INTELPage IP™ is a state-of-the-art IP paging transmitter that meets the specific needs of the modern paging industry. INTELPage IP is fully compatible for operation, through IP/Ethernet connectivity, with the Fusion Event Management Module™ (EMM) and Amcom Messenger™. In combination with these solutions, the INTELPage IP transmitter ensures messages are dispatched in an accurate and timely manner to communication devices such as pagers and LED signs.

The INTELPage IP is available in a 19" rack-mount design or stackable plastic enclosure (5 Watt only). The INTELPage IP comes in 5W, 25W, 50W and 100W options to support various coverage requirements and is available in all standard UHF and VHF frequencies.

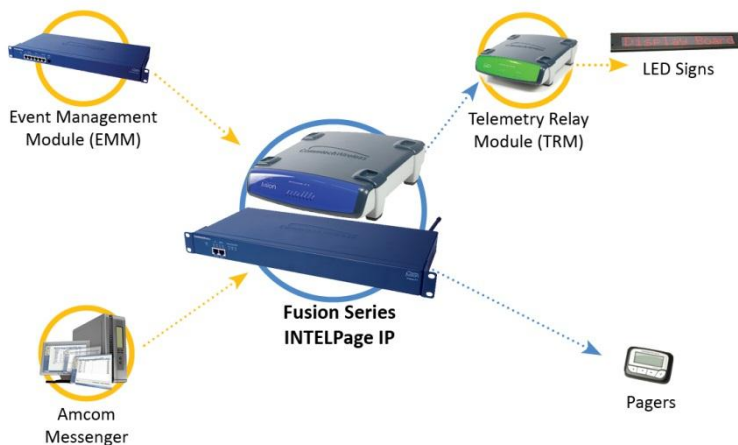

To learn more about Amcom Software products and solutions, please visit [www.amcomsoftware.com](http://www.amcomsoftware.com)

### Technical Specifications

INTELPage IP*	
<b>Equipment Type</b>	Non Return to Zero IP and Serial Based POCSAG Encoder
<b>Power Supply</b>	110-240VAC 50/60Hz (Autosensing)
<b>Frequency Range</b>	VHF – 148-174 MHz Synthesized UHF – 440-470 MHz Synthesized
<b>External Connectors</b>	Serial: RS232C, 300-57600 Baud, RJ45F Ethernet: IEEE 802.3, 10 Base-T, RJ45
<b>Status LEDs</b>	Power, Busy, PTT, Data, RS232 Tx, RS232 Rx, IP Activity, IP Link
<b>Programming</b>	Via Terminal or Web Browser
<b>Pager Database</b>	1000 Pager IDs
<b>Supported Input Protocols</b>	TAP (PET, IXO) / COMP1, 2 / SCOPE / TNPP / Terminal / Tekk (Waveware)
<b>Supported Output Protocols</b>	POCSAG 512, 1200 or 2400bps
<b>Channel Spacing</b>	12.5 kHz (Narrow) & 25 kHz (Wide)
<b>Dimensions</b>	5W Plastic – 255 x 230 x 70 mm (10 x 8 x 2.7 inches) 5W Rack – Standard 19" Rack Case 439 x 205 x 44 mm (17.3 x 8.1 x 1.7 inches) Minus Rack Ears 25/50/100W Rack – Standard 2RU 19" Rack Case 439 x 430 x 88 mm (19 x 16.5 x 3.4 inches) Minus Rack Ears
<b>Weight</b>	5W Plastic – 0.7kg / 1.5lb Net 5W Rack – 2.7kg / 5.9lb Net 25W Rack – 7.0kg / 15.4 lb Net 50W Rack – 9.5kg / 21.0 lb Net 100W Rack – 9.5kg / 21.0 lb Net
<b>Operating Temperature</b>	0 °C to 50 °C (32 °F to 122 °F) (20-90% RH Non-Condensing)
<b>Storage Temperature</b>	-10 °C - 60 °C (14 °F - 140 °F) (10-95% RH Non-condensing)
<b>Approvals</b>	FCC, CE, C-tick, ROHS, IC, EN60950, IDA, CB (depending on model)

\*Additional technical/product information can be found in the product user manual